

DE – Montageanleitung

Lüftungshülse

Montage im Fertigteilwerk (Abb. 1 - 9)

1. Variante 1: Mit Heißkleber auf Arbeitstisch kleben.
2. Variante 2: Mit Magnet auf Arbeitstisch positionieren.
3. Fertigdecke wird betoniert.
4. Schutzdeckel von Lüftungshülse entfernen.
5. Stutzen auf gewünschte Länge kürzen und in Hülse einschieben.
6. Rohre anschließen, obere Bewehrung einbringen und betonieren.
7. Lüftungshülse von unten mit Hammer einschlagen.
8. Adapterring von Luftauslass kann direkt angeschraubt werden.
9. Standardlüftungsauslässe Ø 125 mm können montiert werden.

EN – Installation instructions

Ventilation sleeve

Installation at a precast factory (Fig. 1 - 9)

1. Option 1:
Paste the ventilation sleeve on the formwork with a hot glue.
2. Option 2:
Position the ventilation sleeve with the magnet on the formwork.
3. Insert the steel strutting and pour the concrete.
4. Remove the protection cover from the ventilation sleeve.
5. Cut the component to the desired length and slide it into the ventilation sleeve.
6. Connect the pipes, insert steel strutting and pour concrete.
7. Open the bottom of the ventilation sleeve with a hammer.
8. Install the ventilation output connector.
9. You can install a standard ventilation output Ø 125 mm.

Abb. 1

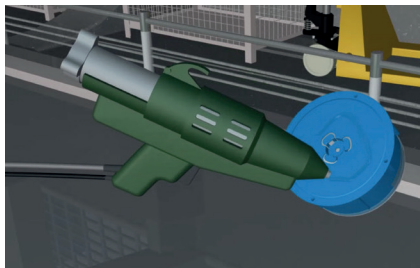


Abb. 2

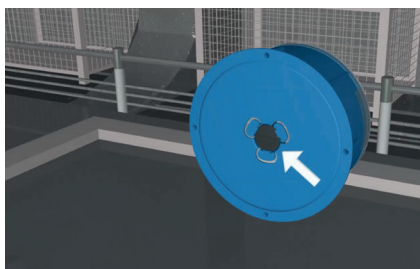


Abb. 3

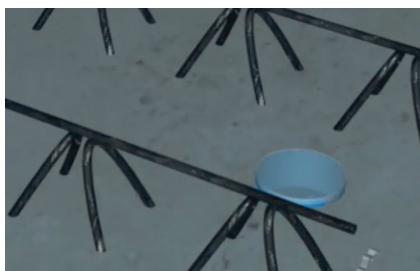


Abb. 4

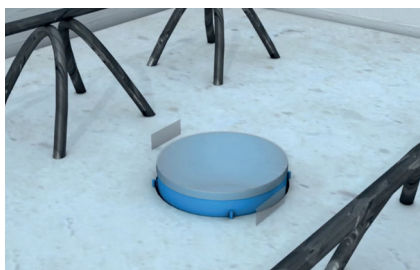


Abb. 5



Abb. 6

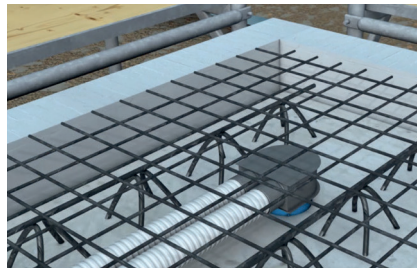


Abb. 7

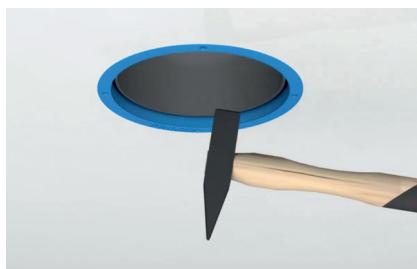


Abb. 8



Abb. 9

